


How to adjust the position of the rack connection

Problem analysis:


- * 1. Adjust the position of the rack connection, You need when you replace the rack;

Solution: Rack A and B are set-up like shown in Picture, find an additional rack as connection.

1. Release the nearest bolt on B rack. 🖱️ 🖱️ 🖱️

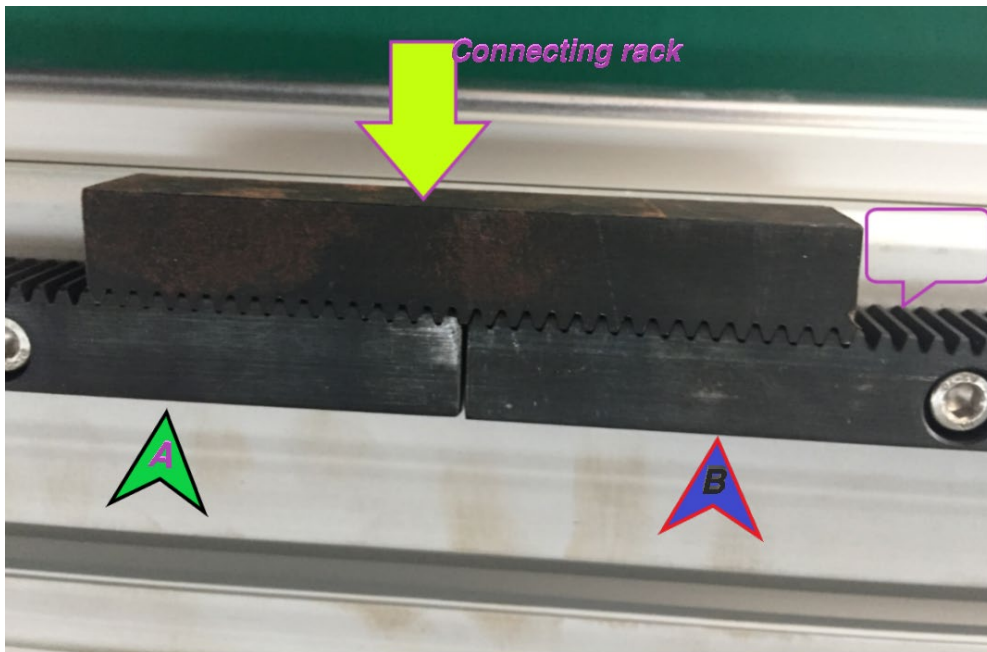

2. Use clamps to tight the racks, like shown in picture 🖱️ 🖱️ 🖱️

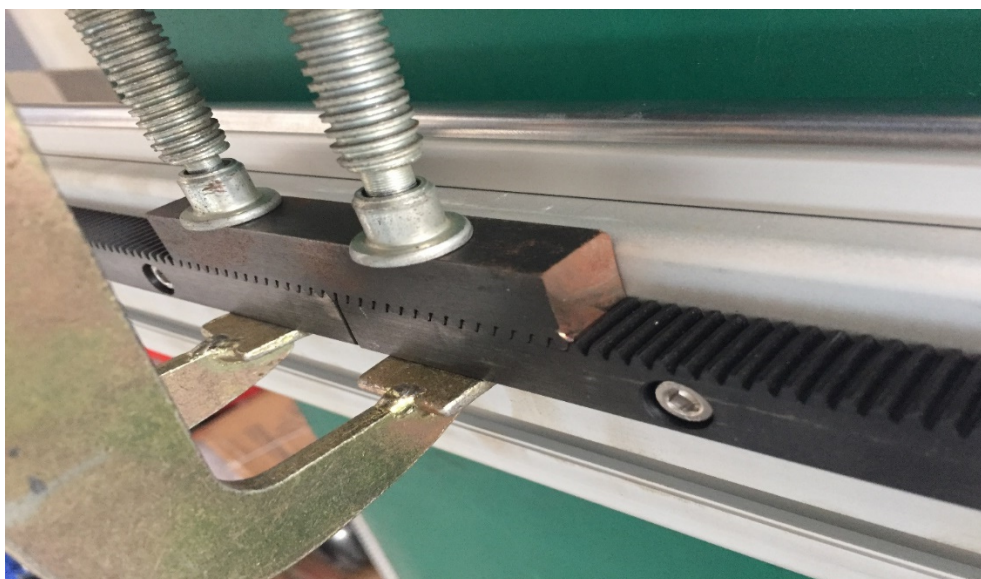

3. Screw in the bolt on B rack, which was released in step 1.

4. Release the clamps.

5. Turn off the power supply and push the crossbeam slowly to check the gear-rack engagement.