


How to change the system metric to inches-F2100

➔ Problem : Change system metric to inch

Problem analysis:


Solution: Step 1- Main interface →Press F5 【Diagnose】 into Diagnose interface
→Press F8 【System Definition】 into System Definition interface→Press F3 【Define】 into define parameter interface→then input key 【1396】 --then press enter.

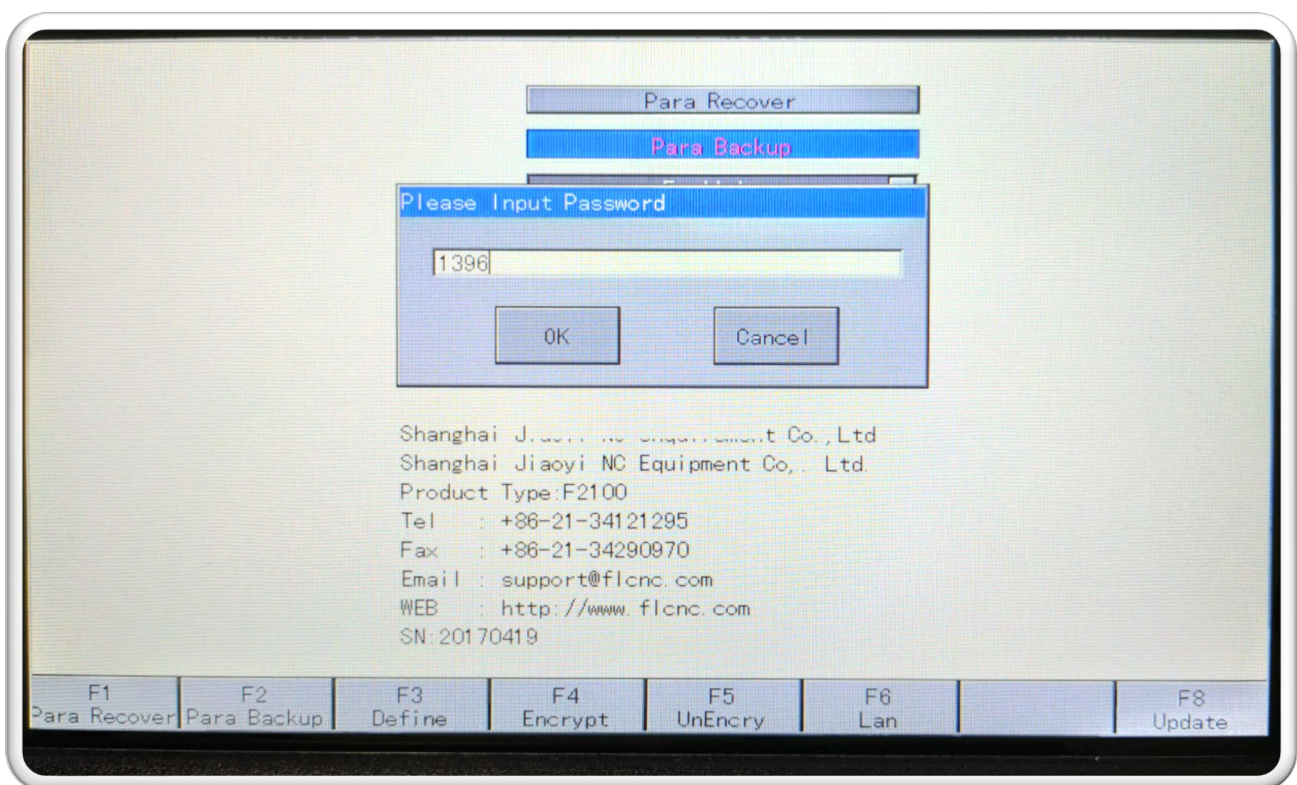

Pic1

Then into Define interface as show picture 2;


Step 2: →Press F5 【Option】 into Option interface as show Pic3

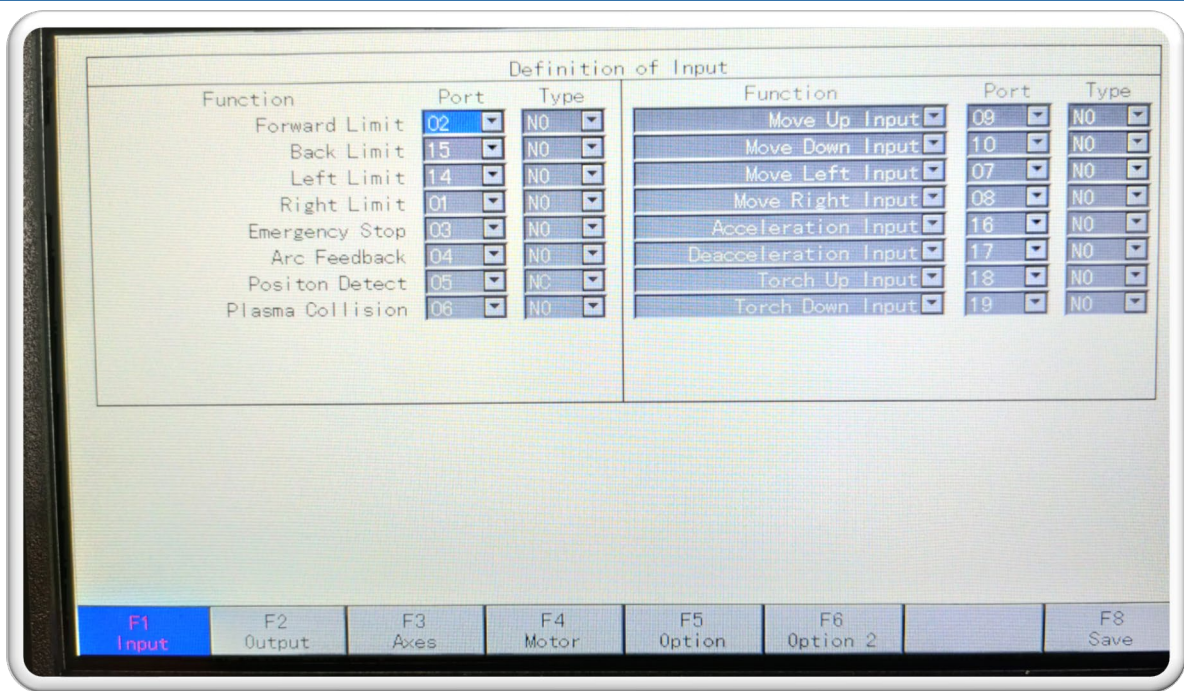

Pic2

Press the arrow key (↓) to Default Unit; → Then press enter to select the inch; → then press F8 to save the parameter;

Please restart the system after restoring factory settings.

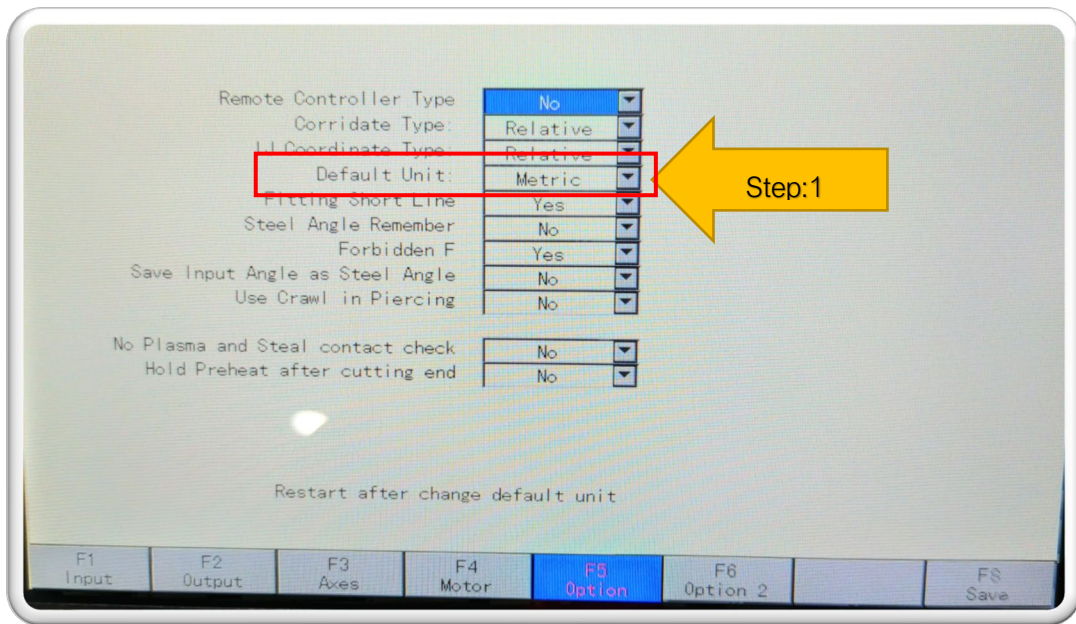

Pic3