

## How to install the gear of the motor

→ Problem : Installation gear

Solution overview: 1. Need steel shaft to withstand motor shaft.

In order to prevent the motor shaft from being damaged, a steel shaft must be placed at the bottom of the motor shaft, and then the gear is mounted.

