

## How to replace the proximity switch

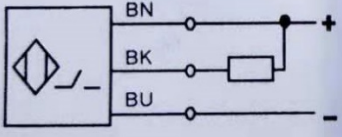
➔ Problem: Replace the proximity switch;

- Solution overview:
1. Determine the model of the proximity switch;
  2. Connecting circuit;

Problem analysis:

- ✦ 1. Determine the model of the proximity switch; as the picture shows;

Solution: Step 1- Detailed introduction

PARAMETERS	
Terminal connections	Diameter M 8
NPN NO	Mounting non-Shield
	Operating distance 2mm
	Operating Voltage 10-30V
	Max. Load Current 200mA

Note: The diameter of the switch is based on the actual situation.

Connecting circuit; as the picture shows:

