

Service Support Spirit

How to set the KERF—F2100S

➔ Problem: Set kerf—F2100S, KERF also ensures the accuracy of parts;

Problem analysis:


✳ 1. CNC system parameter setting;

Solution: Step 1- Main interface → Press F1 **【AUTO】** into AUTO interface as show pic-1



Pic1 the automatic interface

Step2: In the automatic interface, press F **【KERF】** , Into KERF Settings interface As shown pic2;

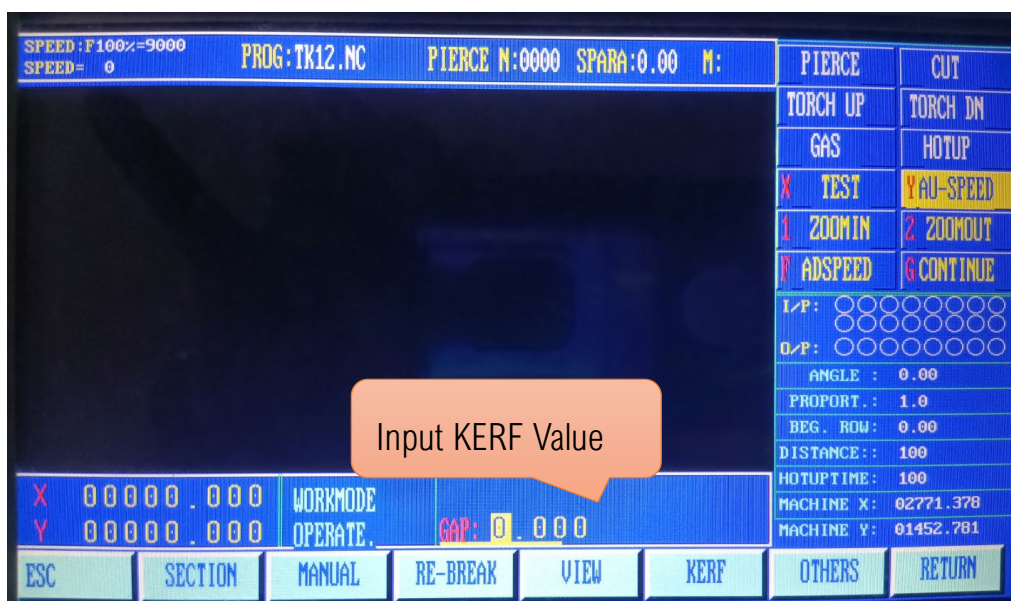

Pic2 KERF Settings interface

Service Support Spirit

NOTE: KERF value: Plasma power supply manual generally has reference values.

Step3: Depending on your needs to set the size of the KERF, and then press the Enter key on the system keyboard.

