

Service Support Spirit

How to set the parameters of THC-F1621

➔ Problem : F1621 THC Parameter settings; Parameter standard: L06=0;L07=0;L09=1;

THC only needs three parameters ,When using a new THC;

↳ Solution overview:

Step 1: THC Main interface → Press **【MENU】** into THC interface→ Then the parameters in the parameter display screen will change, and whenever you press **【MENU】** --Then The parameters are: stop pressing at **888**, as shown in picture 2; → Set the parameters .

NOTE: If you press the **【MENU】** several times, the parameter display screen has not found L01, please refer to the Unlock settings;

Parameter display screen



Parameter Value display screen

Pic-1



Pic-2

Service Support Spirit

→ The Unlock settings

THC Main interface → Press **【MENU】** into THC interface → Then the parameters in the parameter display screen will change, and whenever you press **【MENU】** --Then The parameters



are: stop pressing at **【SYS】** , as pic 3; → Unlock: Press



then Press **【ENTER】** --Into U00 interface then → Rotate the IHS knob to adjust the parameter to U03 (as pic 4); → Press **【ENTER】** into Parameter Value display screen → Rotate the

IHS knob to adjust the Parameter Value to 1 → Then Press **【ENTER】** → Press **【MENU】** 3 times into Digital interface; Unlock successfully, then follow the first step to find L01

Parameter display screen



Parameter Value display screen

Pic-3

IHS Knob



Pic-4

Service Support Spirit

↪ Set the parameters:

Step 2: Into L01 interface → then Rotate the IHS knob to adjust the parameter to L06 (as pic 5); → Press **【ENTER】** into Parameter Value display screen → Rotate the IHS knob to adjust the Parameter Value to 0 → Then Press **【ENTER】** → Into L06 interface Rotate the IHS knob;

Use the same method:

Parameter standard: L06=0; L07=0; L09=1;

Complete parameter setting Press **【MENU】** 3 times into Digital interface;

