

## Automatic oil pump Manual

1. There are wiring instructions on the top cover;
2. The device has lubrication, intermittent, setting and other functions.

Lubrication and intermittent time can be set by yourself.

The ACT green light is on the fuel supply time, the range is 1-60S (seconds).INT red light is on for intermittent time, the range is 10-999M (minutes).

Keep pressing the SET button for 3 seconds, Enter the lubrication program setting state. At this time, the number on the display is flashing (green light is on), Press ▲ or ▼ to increase or decrease the actual lubrication time;

Then click and press the SET button, the display enters the interval time setting (red light is on), and the number is flashing at this time, press ▲ or ▼ to increase or decrease the actual interval time.

After confirming that the setting is correct, click the SET button to complete the setting.

The electric pump starts to work according to the new set time;

3. When the system is abnormal, the number on the display screen will flicker and there will be a beep sound, the electric pump will stop working, indicating that the oil level is insufficient, and lubricant needs to be added;