

## The machine cannot start arcing-Voyager/Cruiser-mini


→ Problem: SDF-THC cannot start arcing;

- Solution overview:
1. The system output an arcing signal;
  2. The DIV PCB output arcing signal;

Problem analysis:

- ✳ 1. The system output an arcing signal;


**Solution:** Step 1- Main interface → Press **【CUTOXY】** on the keyboard → Measured with a voltmeter, The **【COM】** and **【CUT】** have DC24V green plug on the system back; At the same time On the system screen: the arc starting indicator light is on and the arc starting signal output light turns red;

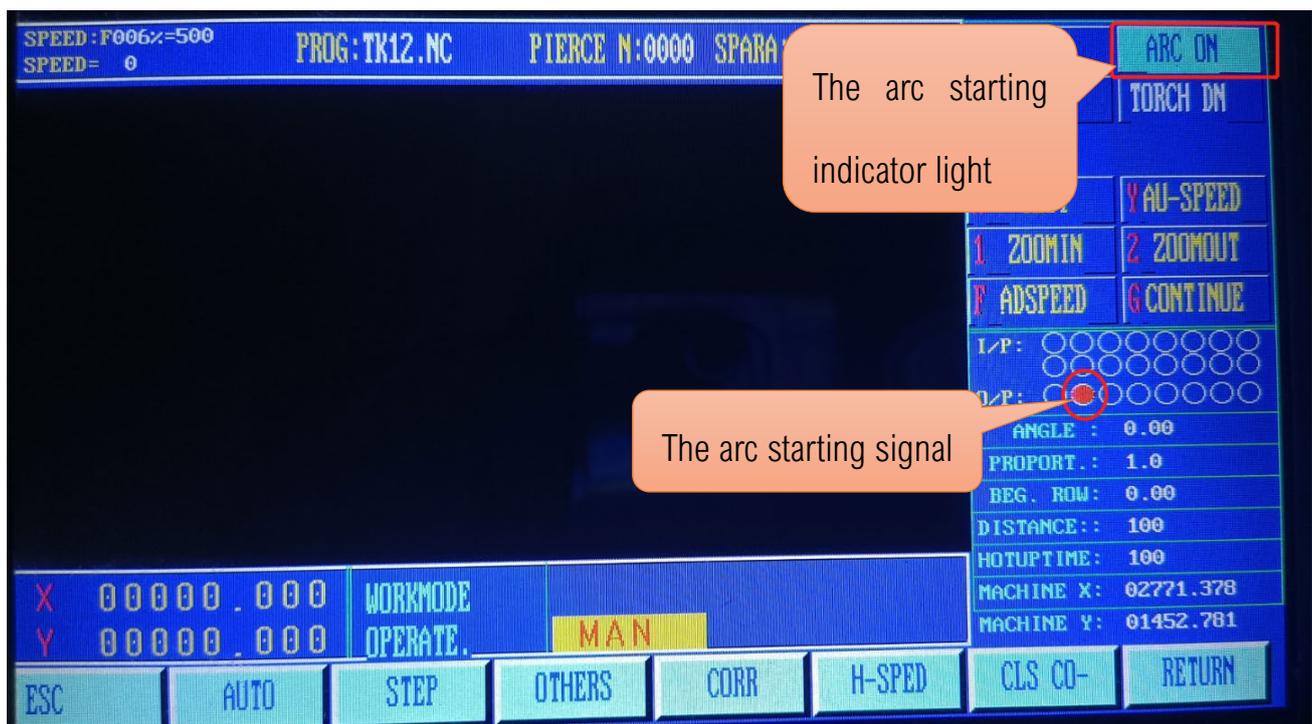

Pic-1

If there is DC24V voltage, the system can output the arcing signal normally, otherwise the system is bad and needs to be replaced;

# Service Support Spirit

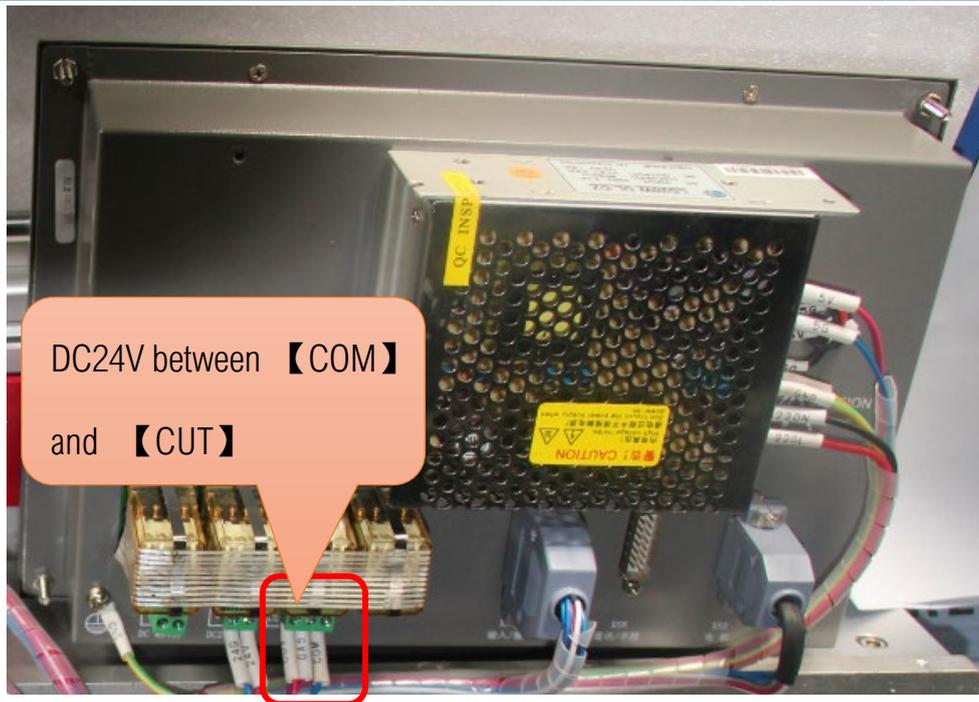


DC24V between **【COM】**  
and **【CUT】**

Pic-2

## Problem analysis:

- \* 1. The DIV PCB output an arcing signal;

**Solution:** Step 1- Main interface → Press **【CUTOXY】** on the keyboard → Measured with a voltmeter, The **【J5-1】** and **【J5-2】** are connected;

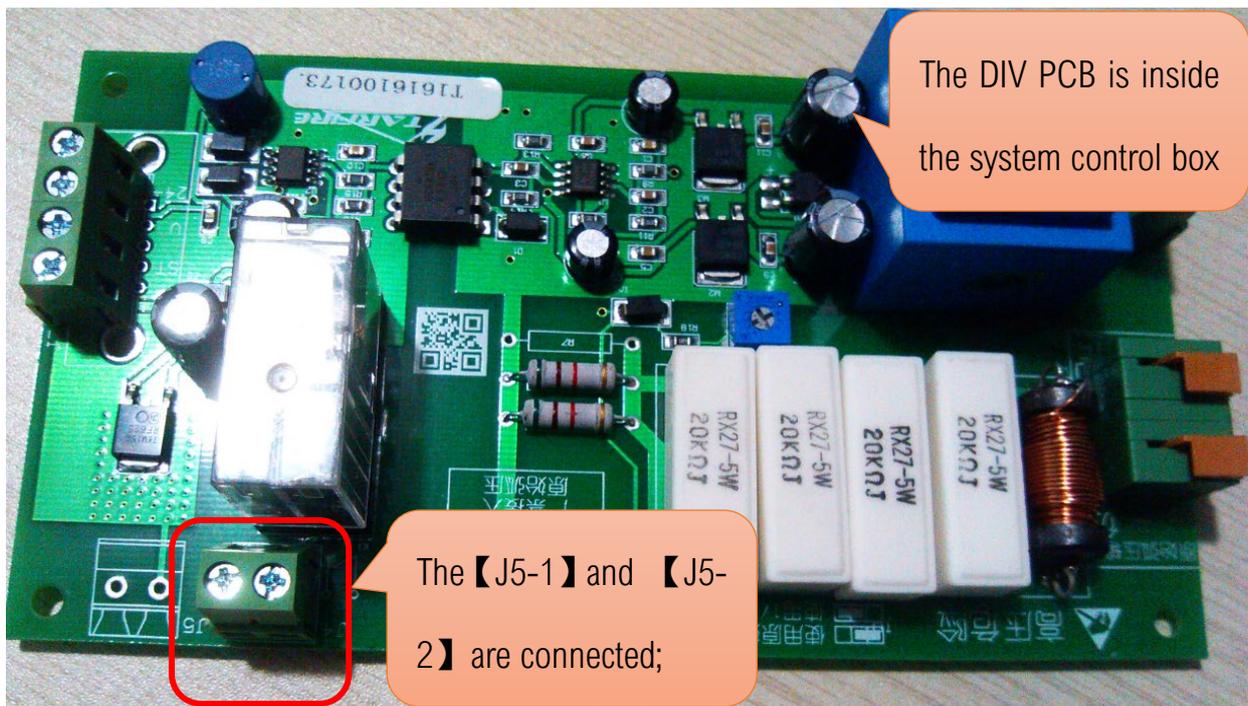

The DIV PCB is inside  
the system control box

The **【J5-1】** and **【J5-2】**  
are connected;

Pic-3

If there are connected, the DIV PCB can output the arcing signal normally, otherwise the DIV PCB is bad and needs to be replaced;