


## Adjust the parameters of the Servo driver—MINAS-Li

➔ Problem : Adjust the parameters of the Servo driver—MINAS-Li;

Problem analysis:

✳ Adjust the parameters of the Servo driver—MINAS-Li;


Solution: Step 1- Prepare a communication cable as show pic1

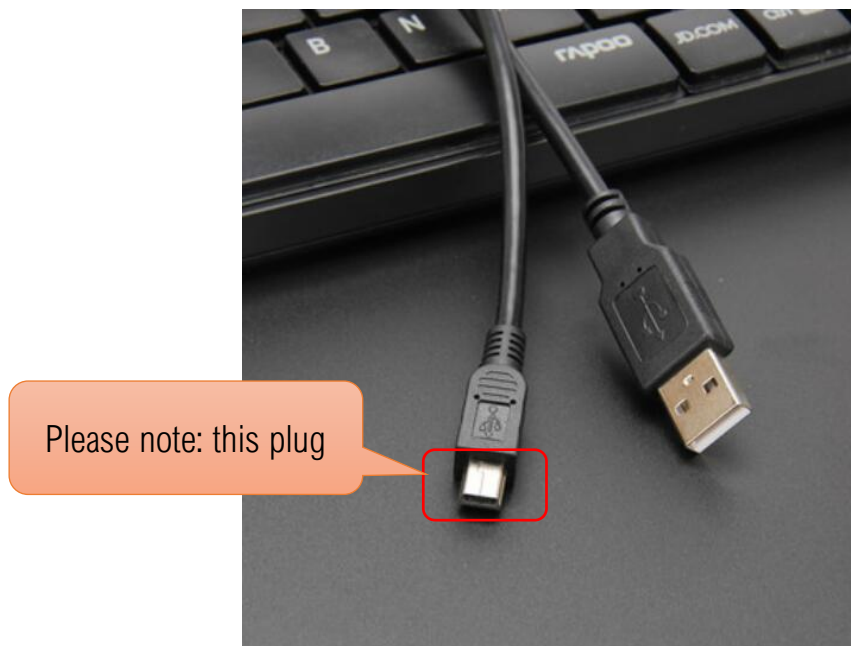

Pic1

Step 2- Install the 'PANATERM' software according to your computers configuration ;

When using "PANATERM" for use with MINAS, please prepare USB mini-B cable with noise filter (commercially available) for connecting PC and Driver. Software in attachment;

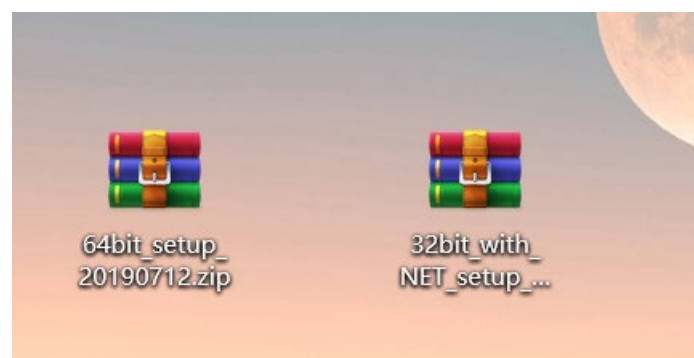


Pic2


# Service Support Spirit

Step 3- InPut the folder "MINAS-LIQI" in the PANATERM software installation location;

The following path "D: \ Panasonic Corporation \ MINAS \ PANATERM \ ini \ def";



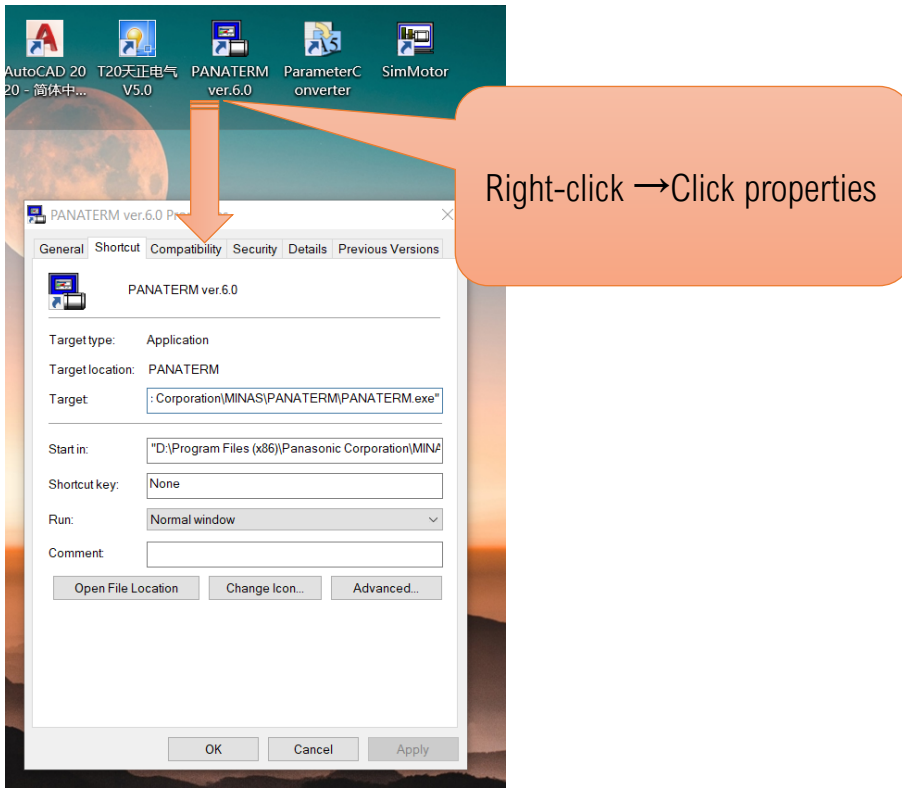


→ Open PANATERM software after completion; Select any series to enter, as shown in the figure:

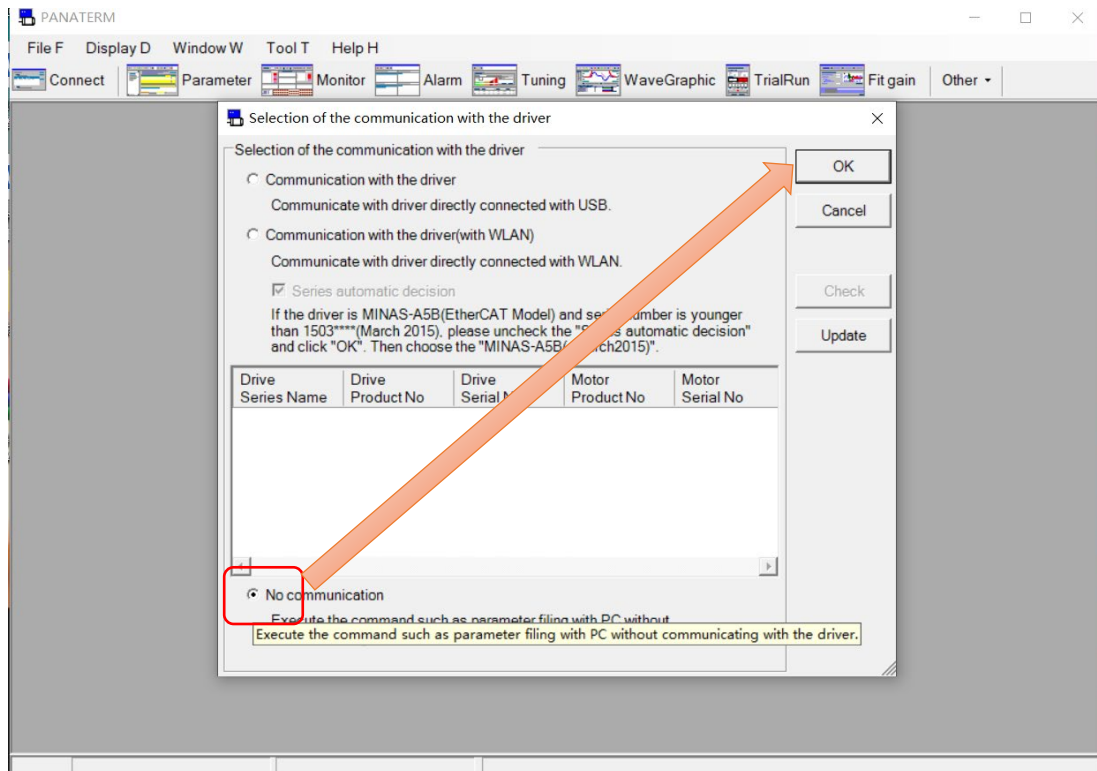


# Service Support Spirit

→ Series definition settings, as shown in the figure:

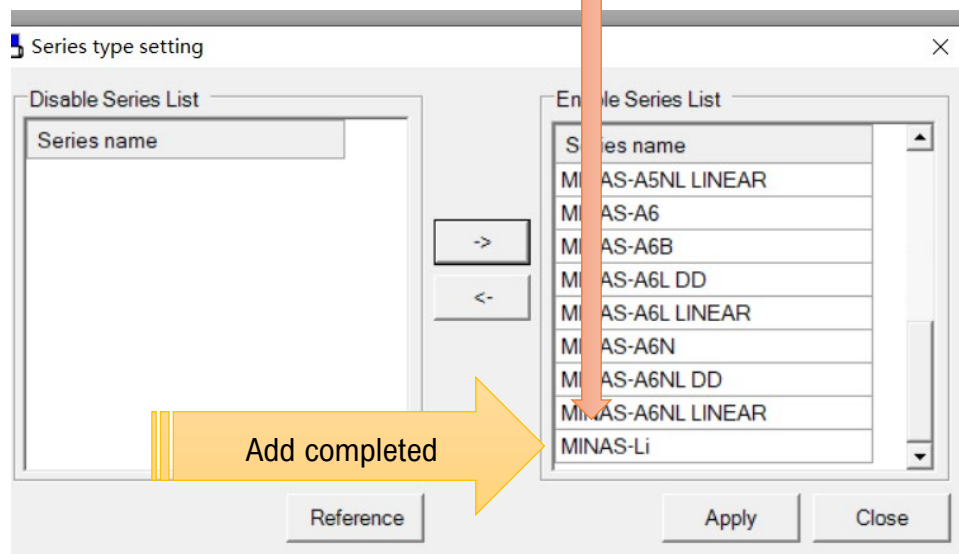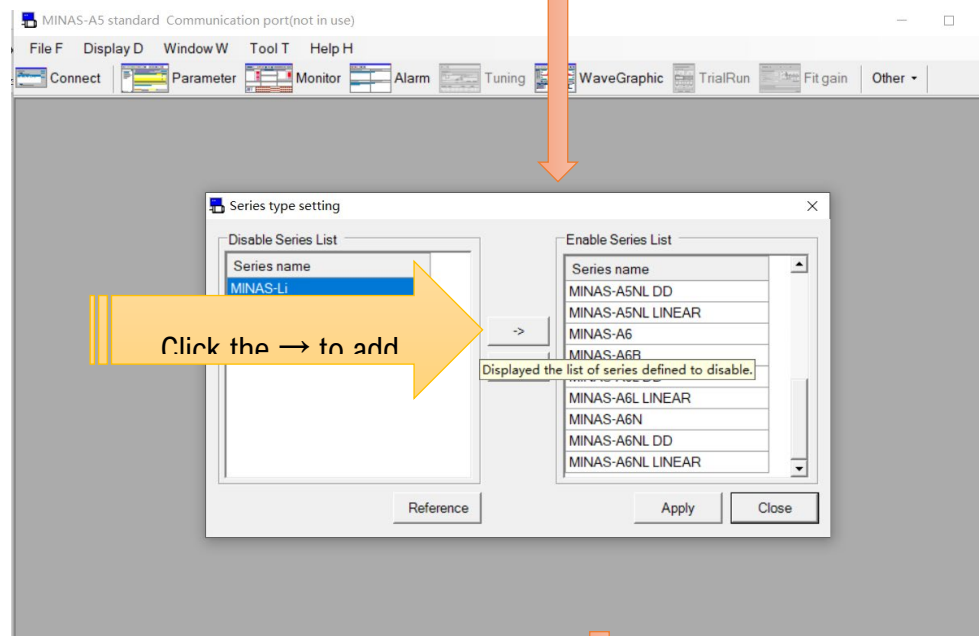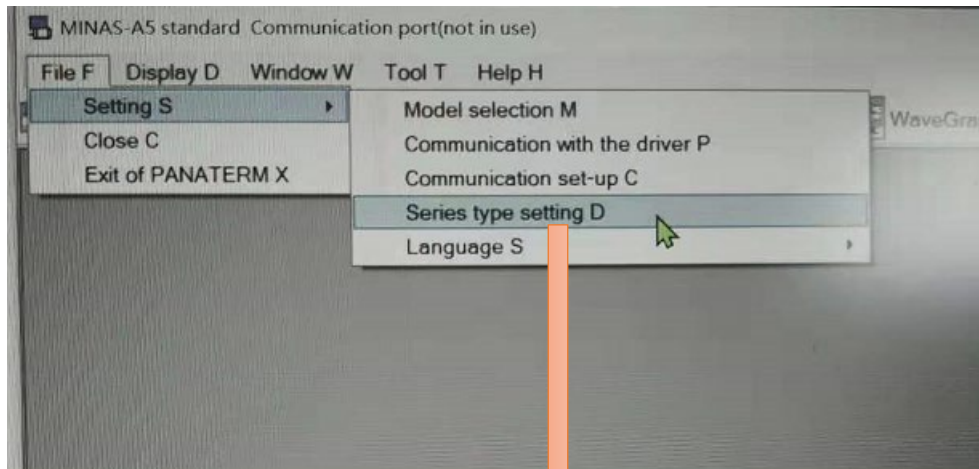


# Service Support Spirit

Step 4- Please prepare USB mini-B cable with noise filter (commercially available) for connecting PC and Driver.

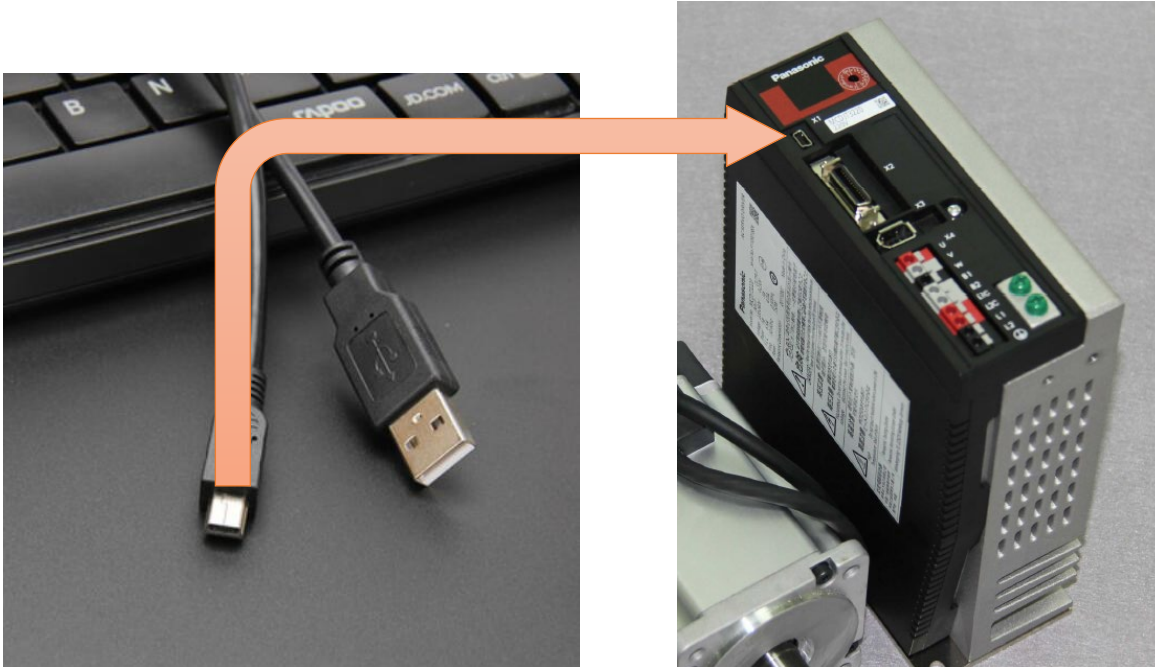


Step 5- Open software PANATERM → Choose model;

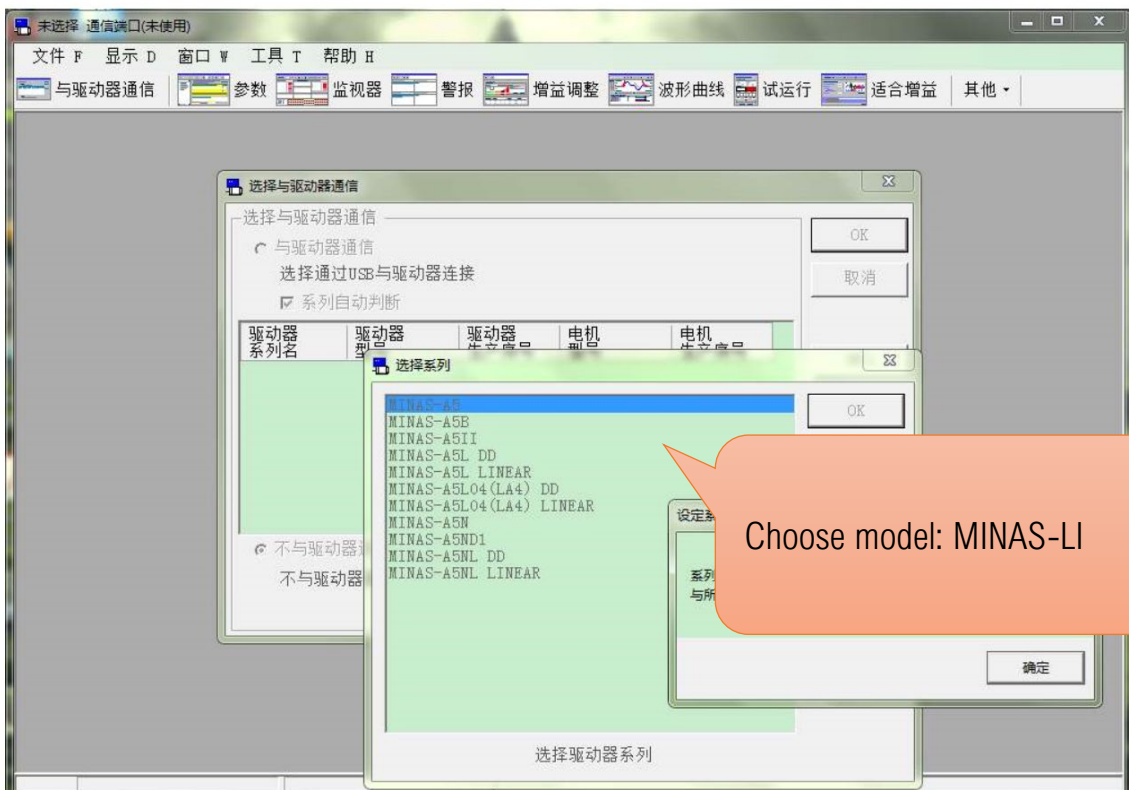

Step 6- First Powering the servo driver;

→ Select parameter Pr. 007 and modify it to 3, then Submit and save parameter;

→ Re-power the servo driver;

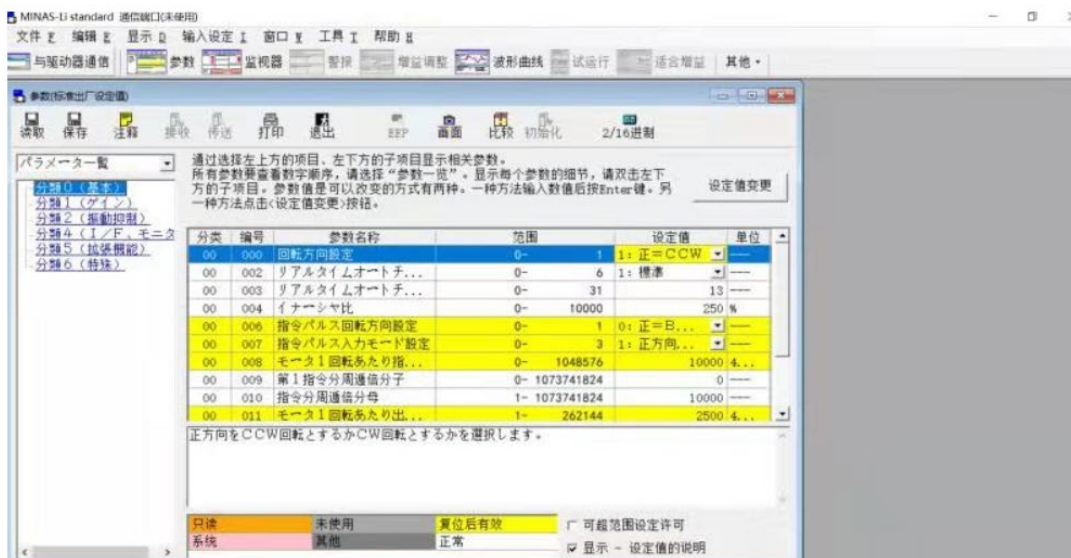

Step 7- Test servo driver, If you still have problems, please check whether the parameters are successfully modified;