


How to change time and date—F2100S

→ Problem: Change time and date F2100S;

Problem analysis:


✦ 1. CNC system parameter setting;

Solution: Step 1- Main interface → Press F4 【SETUP】 into parameter interface as show pic1 → Press the keyboard of the system panel, Then Input “GX1980”, → Into password interface and input password: 1928, As show pic2 → then press enter Into DATE interface as show pic3.

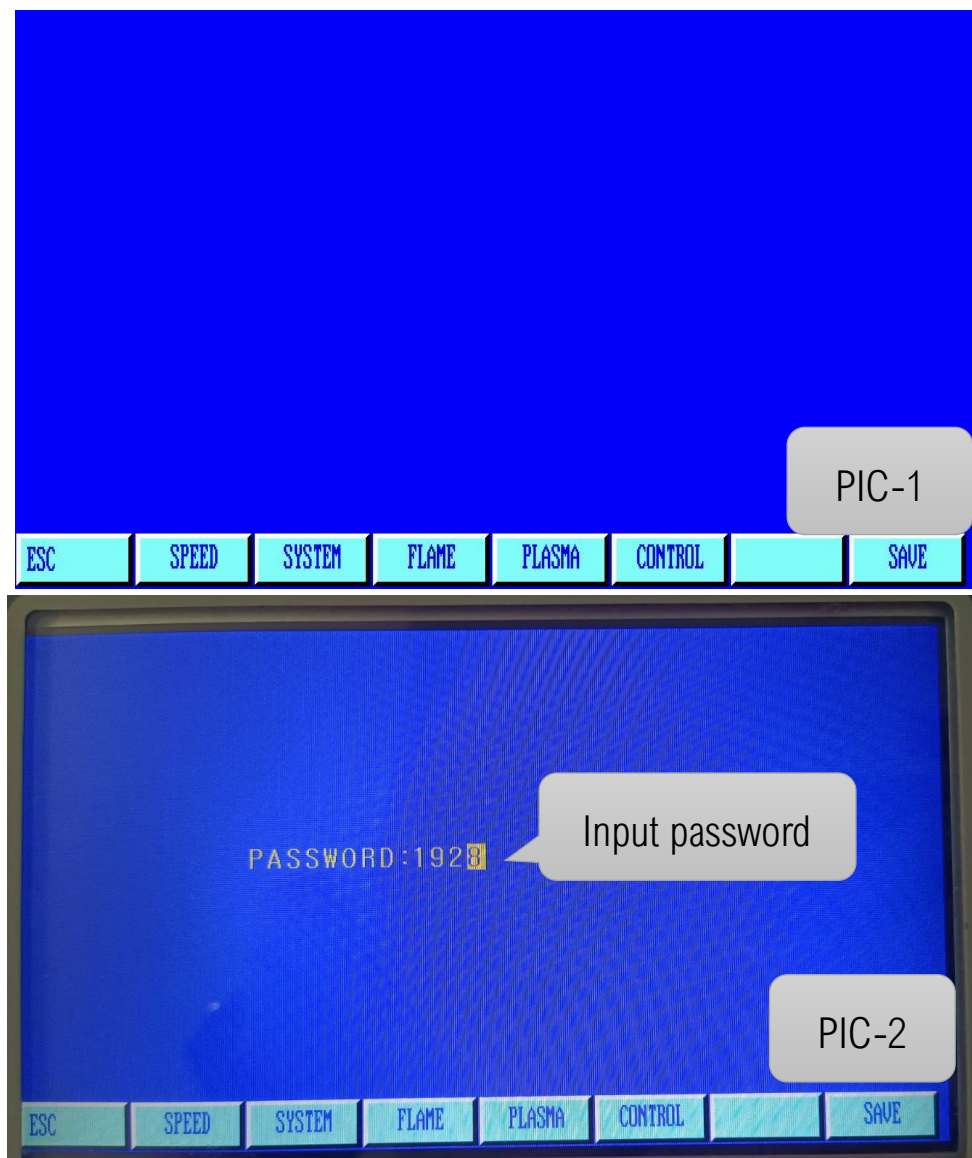

Service Support Spirit

Step 3: Press the keyboard of the system panel, Change the time and date, save and exit. Then time change complete.

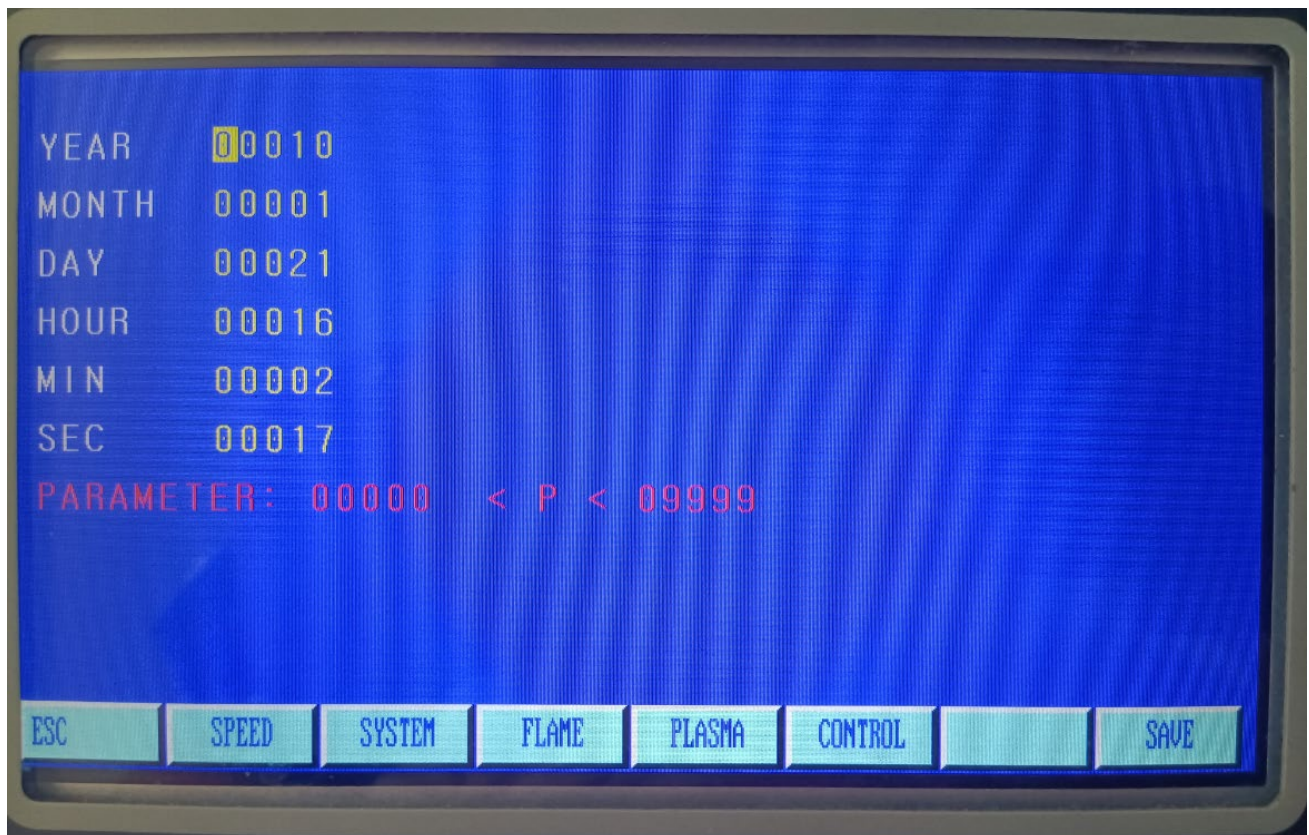

Pic3